


Mini LED Light

Operation: Push thumbwheel forward to light, on two color models, toggle switch left /right to select LED color **Low battery Indication:** White LEDs don't light, Red LEDs light dimly. **This is normal** as white LEDs require higher voltage.

How to change the battery:

- 1) Depress latch tab by pressing bump next to thumbwheel, rotate cap out and down to remove.
- 2) Remove circuit board and battery.
- 3) Detach battery from circuit board and attach new 9 volt.
- 4) Insert circuit board and battery into body.

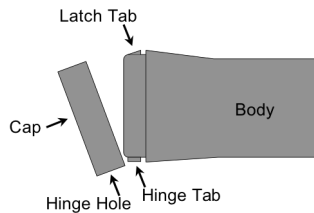

1 Year limited warranty: Rigel Systems, 26850 Basswood, Rancho Palos Verdes CA, 90275 warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 1 Year from the date of purchase under normal use. During this warranty period, Rigel Systems will, at its option, repair or replace the product without charge for parts or labor when delivered to Rigel Systems with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to Rigel Systems are your responsibility. This warranty does not apply if the product has been altered or repaired by anyone other than Rigel Systems or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. **The product is not a toy. Keep away from children..**