 


nFOCUS™

Focus Motor Controller

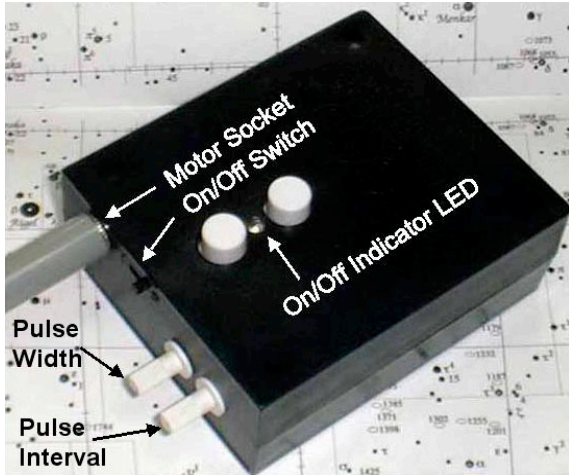

On/off: Push slide switch to left to turn on (indicator LED will light), right to turn.

 
Low Speed Operation: Press either button for direction.

Low Speed Adjustment: The inner white knob adjust pulse width (how long the motor is on) while the outer knob adjusts pulse interval (the pause between pulses).

High Speed Operation: Press either button for direction and, while holding it down, press the other button for high speed in that direction.

nFOCUS™

Focus Motor Controller

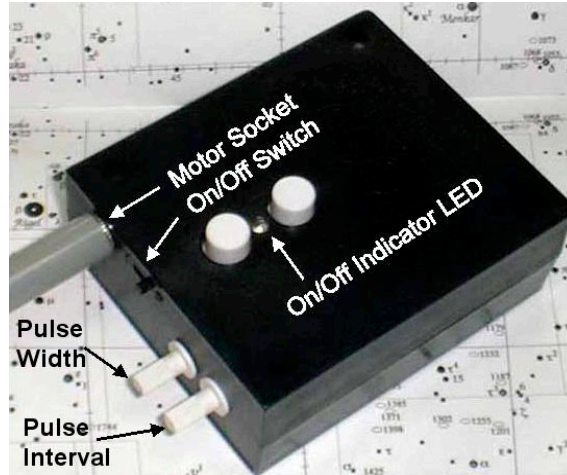

On/off: Push slide switch to left to turn on (indicator LED will light), right to turn.

 
Low Speed Operation: Press either button for direction.

Low Speed Adjustment: The inner white knob adjust pulse width (how long the motor is on) while the outer knob adjusts pulse interval (the pause between pulses).

High Speed Operation: Press either button for direction and, while holding it down, press the other button for high speed in that direction.

nFOCUS™

Focus Motor Controller

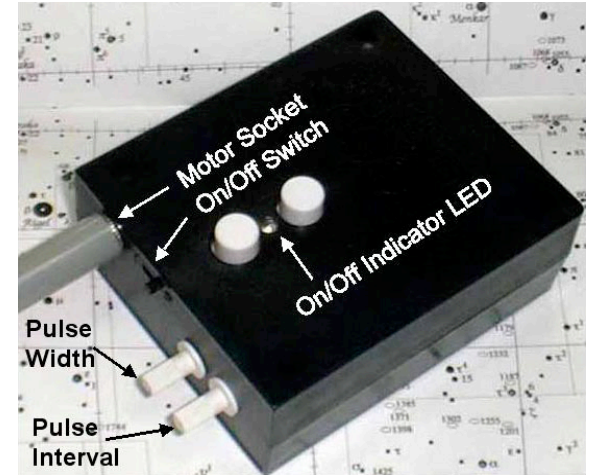


On/off: Push slide switch to left to turn on (indicator LED will light), right to turn.

Low Speed Operation: Press either button for direction.


Low Speed Adjustment: The inner white knob adjust pulse width (how long the motor is on) while the outer knob adjusts pulse interval (the pause between pulses).

High Speed Operation: Press either button for direction and, while holding it down, press the other button for high speed in that direction.

 
Battery Removal: Hold nFOCUS upside down, with white knobs up. Place thumbs on battery access plate as indicated. Press down and slide access plate under lip of opening in direction of arrow. Other end of battery access plate will spring up allowing access plate to be removed.

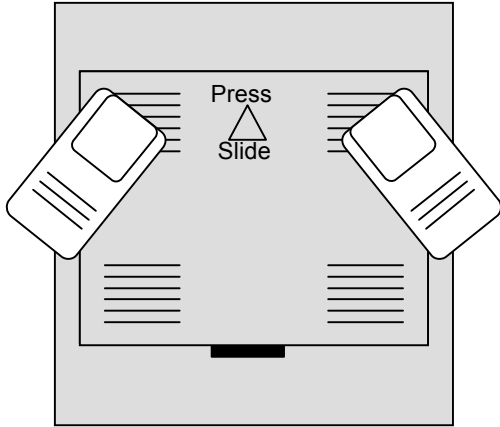

 Battery Removal: Hold nFOCUS upside down, with white knobs up. Place thumbs on battery access plate as indicated. Press down and slide access plate under lip of opening in direction of arrow. Other end of battery access plate will spring up allowing access plate to be removed.

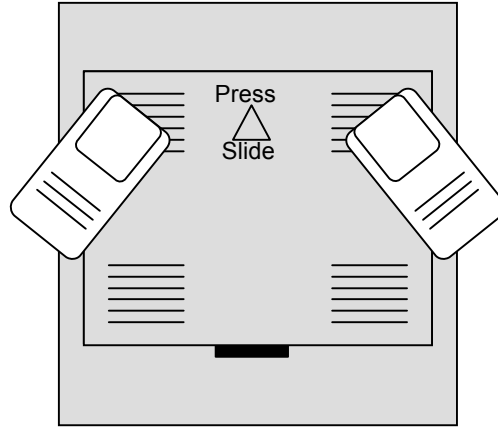

 Battery Removal: Hold nFOCUS upside down, with white knobs up. Place thumbs on battery access plate as indicated. Press down and slide access plate under lip of opening in direction of arrow. Other end of battery access plate will spring up allowing access plate to be removed.

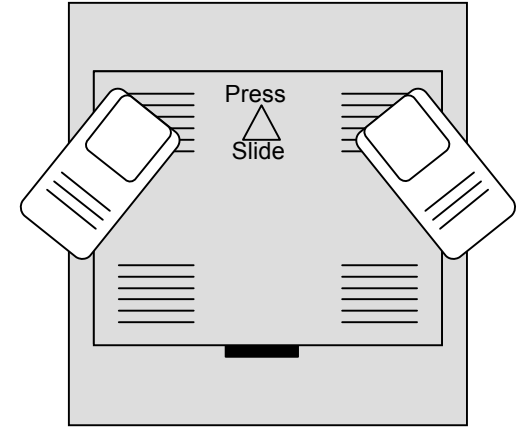

Battery Installation Uses four (4) AA batteries. Hold nFOCUS upside down with white adjustment knobs down. Insert arrowed end of access plate under lip of opening with arrow pointing down. Press down on access plate and slide upwards until securely attached.

1 Year limited warranty: Rigel Systems, 26850 Basswood Ave, Rancho Palos Verdes CA, 90275 warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 1 year from the date of purchase under normal use.

During this warranty period, **Rigel Systems** will, at its option, repair or replace the product without charge for parts or labor when delivered to **Rigel Systems** with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to **Rigel Systems** are your responsibility.

This warranty does not apply if the product has been altered or repaired by anyone other than **Rigel Systems** or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. The product is not a toy. Keep away from children.

Battery Installation Uses four (4) AA batteries. Hold nFOCUS upside down with white adjustment knobs down. Insert arrowed end of access plate under lip of opening with arrow pointing down. Press down on access plate and slide upwards until securely attached.

1 Year limited warranty: Rigel Systems, 26850 Basswood Ave, Rancho Palos Verdes CA, 90275 warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 1 year from the date of purchase under normal use.

During this warranty period, **Rigel Systems** will, at its option, repair or replace the product without charge for parts or labor when delivered to **Rigel Systems** with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to **Rigel Systems** are your responsibility.

This warranty does not apply if the product has been altered or repaired by anyone other than **Rigel Systems** or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. The product is not a toy. Keep away from children.

Battery Installation Uses four (4) AA batteries. Hold nFOCUS upside down with white adjustment knobs down. Insert arrowed end of access plate under lip of opening with arrow pointing down. Press down on access plate and slide upwards until securely attached.

1 Year limited warranty: Rigel Systems, 26850 Basswood Ave, Rancho Palos Verdes CA, 90275 warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 1 year from the date of purchase under normal use.

During this warranty period, **Rigel Systems** will, at its option, repair or replace the product without charge for parts or labor when delivered to **Rigel Systems** with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to **Rigel Systems** are your responsibility.

This warranty does not apply if the product has been altered or repaired by anyone other than **Rigel Systems** or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. The product is not a toy. Keep away from children.